

# Nord Drum 2 & Nord Pad Stand Guide

This is a flexible and uncluttered setup using only 3 pieces of Pearl Drum Hardware. This will let you mount both the Nord Drum 2 and the Nord Pad on the same stand and adjust height and tilt of both units.




Parts List: Nord Drum 2, Nord Pad, C-790, AX-25L, AX-28



Remove the top assembly tilter unit from the C-790.




Top C-790 after removing the top assembly tilter unit.

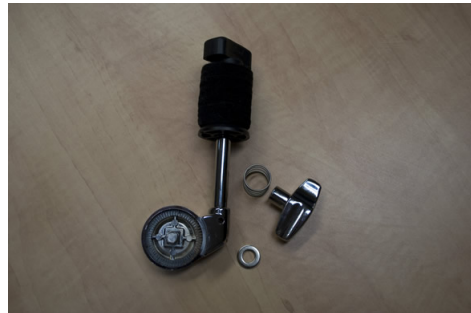

Tilter unit parts can now be stored somewhere safe as they will not be used.



AX-28

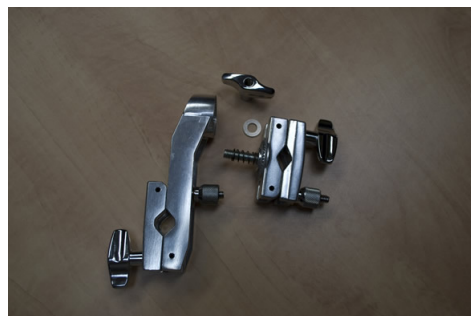

Remove the geared tilter part from the AX-28. Screw, washer and spring.

# Nord Drum 2 & Nord Pad Stand Guide



Insert the Center Bolt with Spring into the top of the C-790 and tighten the unit using the Wing Nut and washer.



AX-28 tilter attached to the upper assembly of the C-790.



Mount the AX-25L to upper tube assembly of the C-790.



Complete Setup of the C-790, AX-28 top and AX-25L on the upper tube assembly of the C-790.



Mount the Nord Drum 2 to the AX-28 tilter and the Nord Pad to the AX-25L.



Connect the Nord Pad to the Nord Drum 2 using the Cat 5 cable.